

**QUICK START GUIDE**  
**WR-450**  
**REMOTE CONTROL**

**For use with Datavideo Teleprompter kits  
TP-600, TP-500, TP-300 and TP-100**

**datavideo**<sup>®</sup>  
Sharing the Value



## Packing List

- 1 x **WR-450** Remote Control
- 1 x **USB A to Micro B USB cable** for charging
- 1 x **USB to jack plug cable** for wired mode
- 1 x **Lanyard necklace**

## Overview

This **WR-450** remote control is designed to be used with Datavideo's teleprompter app, **DV Prompter**.

**DV Prompter app is a FREE download** from the Apple app store for iOS devices and also from Google Play for Android devices. Search for DV Prompter.

**A separate manual is provided for the DV Prompter app**, for further details please visit our website shown on the rear cover.

**NOTE:** The remote should NOT be opened for any reason as this will invalidate the warranty.

## Connections and Controls



- + Speed up text scroll
- Slow down text scroll
- <<| Previous Break Marker
- |>> Next Break Marker
- ▶|| Play text / Pause text

1. Micro B USB socket for charging and control cables.
2. Charging & Indication LEDs.
3. Lanyard jack plug socket.

**Lanyard necklace  
fitted to (3) jack socket**



## Charge the remote control before use



There is a rechargeable battery inside the remote. Use the Micro B USB to USB A cable provided to charge the remote by connection to PC or Mac computer.

**Charge the remote for 2 hours via USB connection to computer.** The RED charging LED will disappear when the battery is fully charged. Alternatively, a 5V smart phone wall charger can be used instead.

**NOTE:** The remote should NOT be opened for any reason as this will invalidate the warranty.

## First use – Remote starts in Wired Mode

When first removed from the retail package the remote is already in **wired mode**. It can be switched to Bluetooth mode if required.

The remote needs to be physically cabled to the phone or tablet it is controlling, a Micro B USB cable to jack plug is provided.

**The jack plug connector fits into the tablet device headphone socket.** The Micro B USB connector plugs into the remote, connector item (1).



**NOTE:** When using this remote in wired mode the **DV Prompter app** should also be set to **Wired – WR150** in the **Remote menu option**.

## Bluetooth Mode – Pairing to your tablet device

To switch the remote into Bluetooth pairing mode press and hold the centre Play / Pause button for EIGHT seconds.

The GREEN LED will light for SIX seconds and then go off.

When the GREEN LED goes off release the Play / Pause button.

The GREEN LED will now blink on off repeatedly to indicate it is ready to pair with a new Bluetooth device.

On the tablet device start the Bluetooth search for nearby devices.

**Select and pair with the WR-450 T remote.**



## **RESET – return the remote to wired mode**

To return the WR-450 remote to wired mode from Bluetooth simply connect the unit to a charging source.

When the RED LED is shown the remote will default to wired mode automatically.

## **Frequently Asked Questions**

**Q1: Can the remote be used with Apple tablet and smart phone devices?**

A1 : Yes.

**Q2: Can I charge the device with my smart phone wall charger?**

A2: Yes, a 5V, Micro B USB, wall charger will charge this remote.

**Q3: How long does it take to charge the remote?**

A3: For a full charge wait for the RED LED to go off. Maximum 2 hours.

**Q4: Can the remote be used with Android tablet and smart phone devices?**

A4: It will work with most Android tablets and some smart phones. Check first if your device supports HID drivers or Bluetooth keyboards. If using wired mode check the headphone socket supports microphone input.

**Q5: Can the remote be used to control several devices at once?**

A5: No. The remote is designed for use with one teleprompting device.

**Q6: How do I switch the unit off?**

A6: The device will automatically turn off after 60mins of being left idle.

**Q7: Where can I find instructions for the free DV Prompter App?**

A7: A separate PDF manual is available for download from our website.

**Q8: Are Windows tablets and smart phones supported?**

A8: No, currently there is no windows based app for this remote.

**Q9: Will this remote work with other apps?**

A9: No, the remote is designed for use with DV Prompter app only.

## Service & Support

It is our goal to make your products ownership a satisfying experience. Our support staff can be contacted during normal office hours . They can assist you in setting up and understanding this product. Please refer to our web site [www.datavideo.com](http://www.datavideo.com) for answers to common questions, support requests or contact your local Datavideo office below.

Datavideo Global Website: [www.datavideo.com](http://www.datavideo.com)

**Datavideo Corporation**  
USA

Tel: +1-562-696 2324  
Fax:+1-562-698 6930  
techsupport@datavideo.us

**Datavideo Technologies**  
Europe

Tel: +31-30-261-96-56  
Fax:+31-30-261-96-57  
info@datavideo.nl

**Datavideo UK Limited**  
UK

Tel: +44-1457 851 000  
Fax:+44-1457 850 964  
sales@datavideo.co.uk

**Datavideo Technologies**  
Taiwan, R.O.C.

Tel: +886-2-8227-2888  
Fax: +886-2-8227-2777  
service@datavideo.com.tw

**Datavideo Technologies**  
Shanghai, China

Tel: +86 21-5603 6599  
Fax: +86 21-5603 6770  
service@datavideo.cn

**Datavideo Technologies**  
Singapore

Tel: +65-6749 6866  
Fax: +65-6749 3266  
sales@datavideo.sg

**Datavideo Hong Kong Ltd**  
Hong Kong

Tel: +852-2833-1981  
Fax: +852-2833-9916  
info@datavideo.com.hk

**Datavideo France s.a.r.l**  
France

Tel: +33-1-60370246  
info@datavideo.fr

**Datavideo Technologies**  
India

Tel: +91-0120-2427337  
Fax:+91-0120-2427338  
sales@datavideo.in

Please refer to our website for the latest PDF version of this manual

<http://www.datavideo.info/Teleprompters/WR-450>

All the trademarks are the properties of their respective owners.  
Datavideo Technologies Co., Ltd. All rights reserved 2014.

09 May 2014 - P/N: WR-450 E1