

Dear Customer

About the Upgrade of the AG-AC30 Firmware


Firmware versions 1.03 and later support the functions below.

To check the firmware version, select the following menu items of this unit:

( : [MAINTENANCE] → [VERSION])

If your version is earlier than Ver.1.03, perform an update.

To update the firmware of this unit, copy the update file to an SD card, insert it into the card slot 1, and select the following menu items:

( : [MAINTENANCE] → [UPDATE])

For the latest update information, check the support website below.



<http://pro-av.panasonic.net/>

(This Site is English only.)

The following menu items have been added.

( : [RECORD SETUP] → [TIME STAMP])

You can stamp the date and time of recording on the images you record.

- 1 Select the menu.**
 - 2 Touch the desired item to enter the setting.**
 -  appears on the screen.
 - 3 Touch [EXIT] to finish the setting.**
-
- The display mode and format of the date and time of recording to be stamped vary depending on the settings for [DATE/TIME] and [DATE FORMAT].
 - The month of the date and time of recording is recorded in English.
 - In the following cases, even when [TIME STAMP] is set to [ON], the date and time of recording are not displayed:
 - (AG-AC30PJ, AG-AC30PB)
 - When [REC FORMAT] is set to [SA 480/59.94i]
 - (AG-AC30EJ)
 - When [REC FORMAT] is set to [SA 576/50.00i]
 - When [DATE/TIME] is set to [OFF]
 - During Freeze Frame
 - During Super Slow Recording
 - Even when [VIDEO OUT OSD] is set to [OFF], the date and time of recording are displayed on the external monitor screen.
 - The time stamp displayed on the screen does not disappear even if you touch .
 - The date and time of recording displayed during [TIME STAMP] recording and the date and time displayed during the playback of the image may not exactly be the same.