



EASY RISER (WEAPON/RAVEN)

Included:

(2) 3/8-16 captured screw

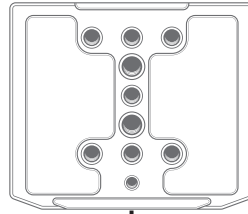

EASY RISER TOP




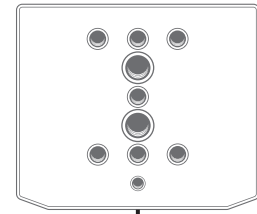


EASY RISER BOTTOM

INSTALLATION

1. Locate and align the two 3/8-16 HOLES on bottom of CAMERA and EASY RISER TOP.

2. Select 3/8-16 SCREWS, tighten EASY RISER to CAMERA with screwdriver.

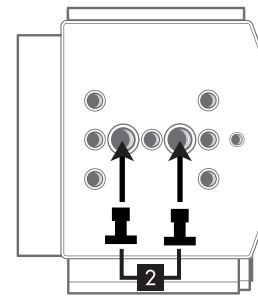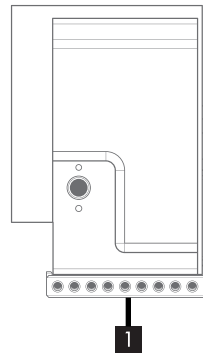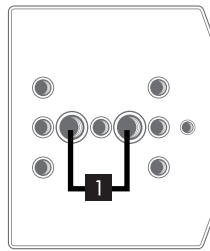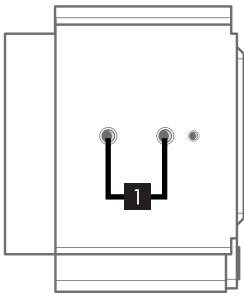


© Wooden Camera, Inc. 2011-2015


EASY RISER (WEAPON/RAVEN)

Included:

(2) 3/8-16 captured screw

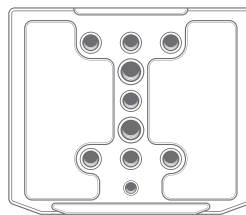

EASY RISER TOP




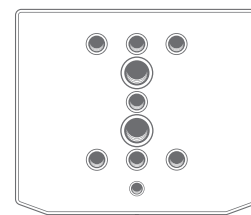


EASY RISER BOTTOM

INSTALLATION

1. Locate and align the two 3/8-16 HOLES on bottom of CAMERA and EASY RISER TOP.

2. Select 3/8-16 SCREWS, tighten EASY RISER to CAMERA with screwdriver.

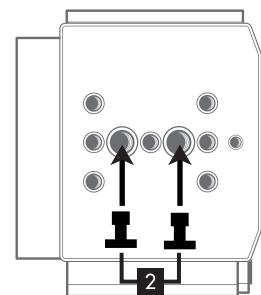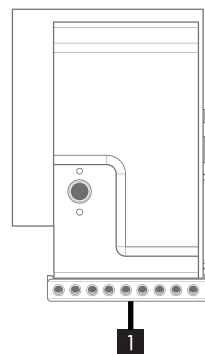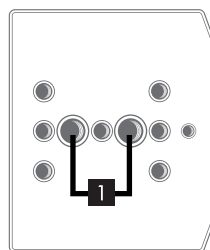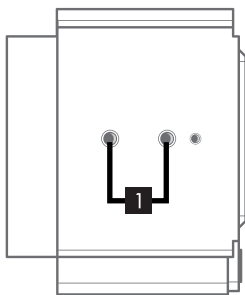

© Wooden Camera, Inc. 2011-2015